


TYPE
01

DETAIL DESCRIPTION : SECTION_Typical aluminium window casement connection with u/s of lintel plastered in.


SCALE : 1:2.5

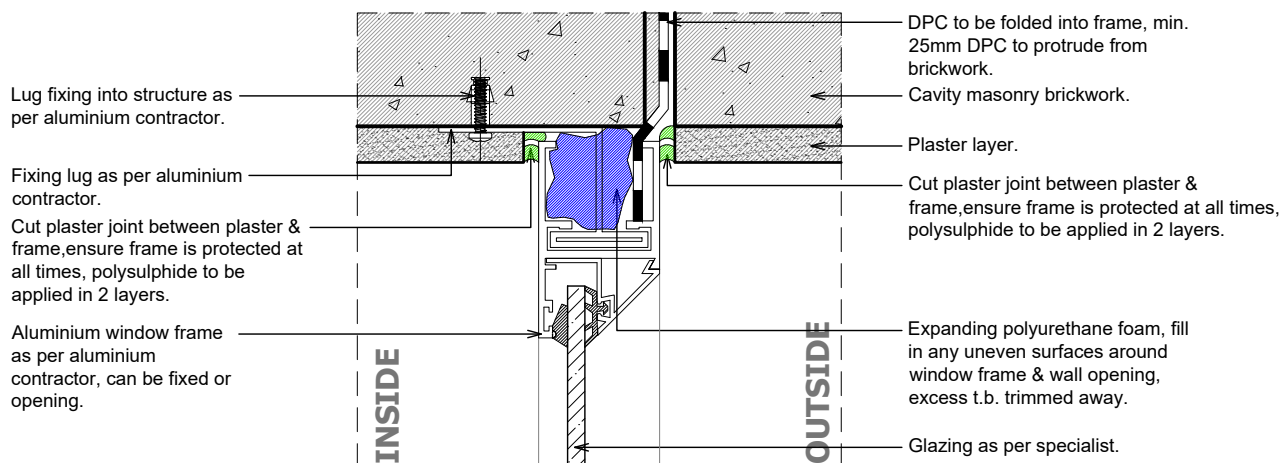

TYPE
02

DETAIL DESCRIPTION : SECTION_Typical Shop Front connection with u/s of lintel plastered in.

SCALE : 1:2.5

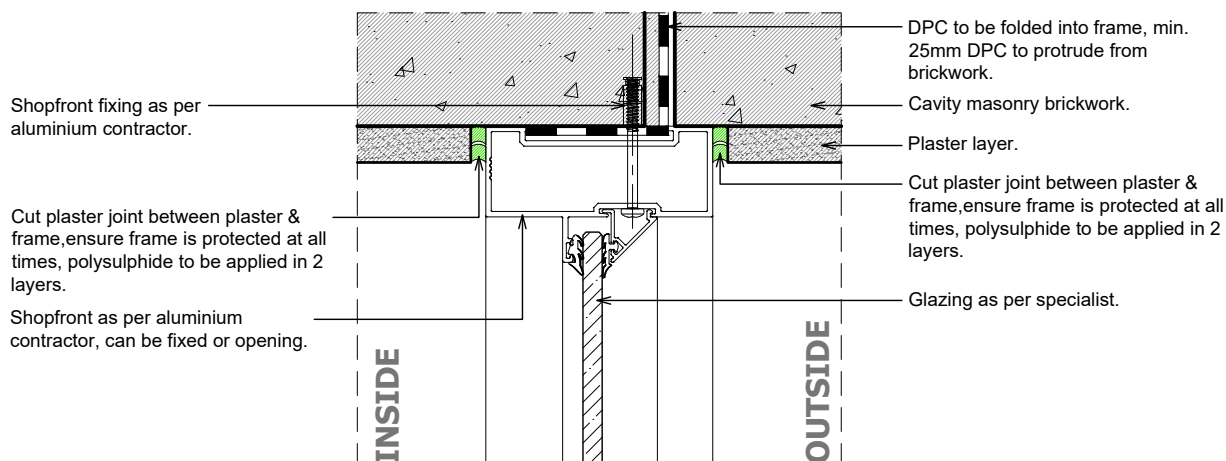


GENERAL NOTE :

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

TYPE
03

DETAIL DESCRIPTION : SECTION_Typical unfinished Concrete Soffit/ Beam/ Masonry connection with aluminium window frame.


SCALE : 1:2.5

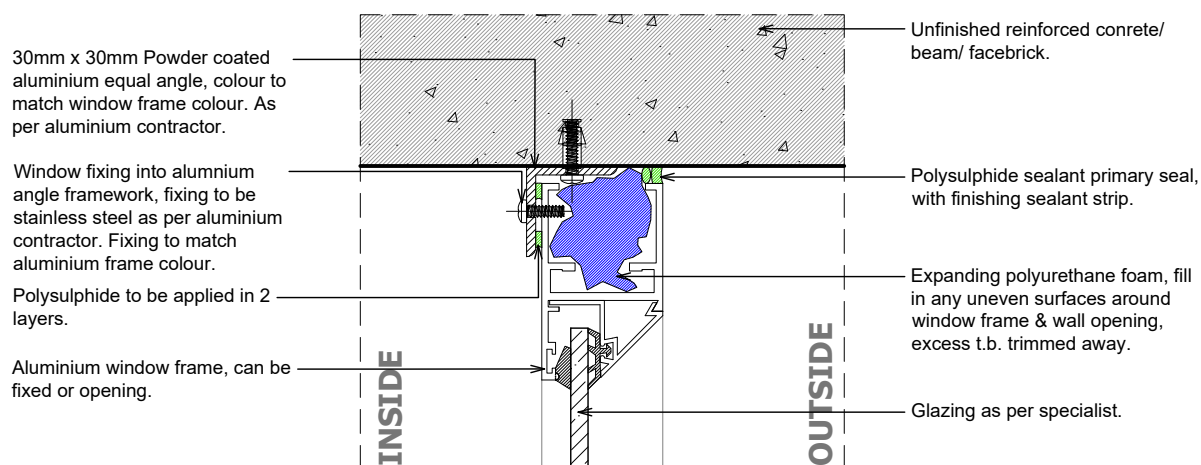

TYPE
04


DETAIL DESCRIPTION : SECTION_Typical unfinished Concrete Soffit/ Beam/ Masonry connection with aluminium shop front.

SCALE : 1:2.5

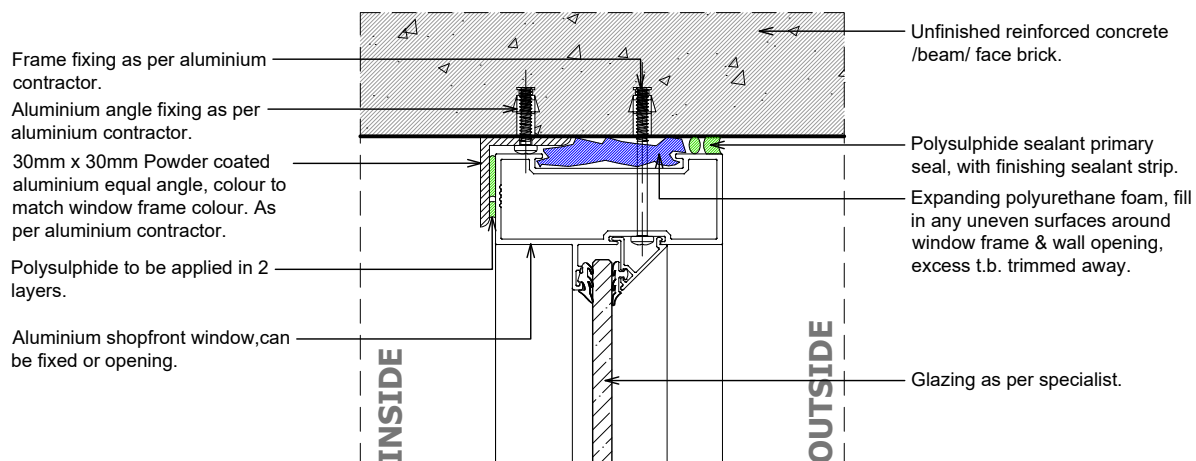


GENERAL NOTE :

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

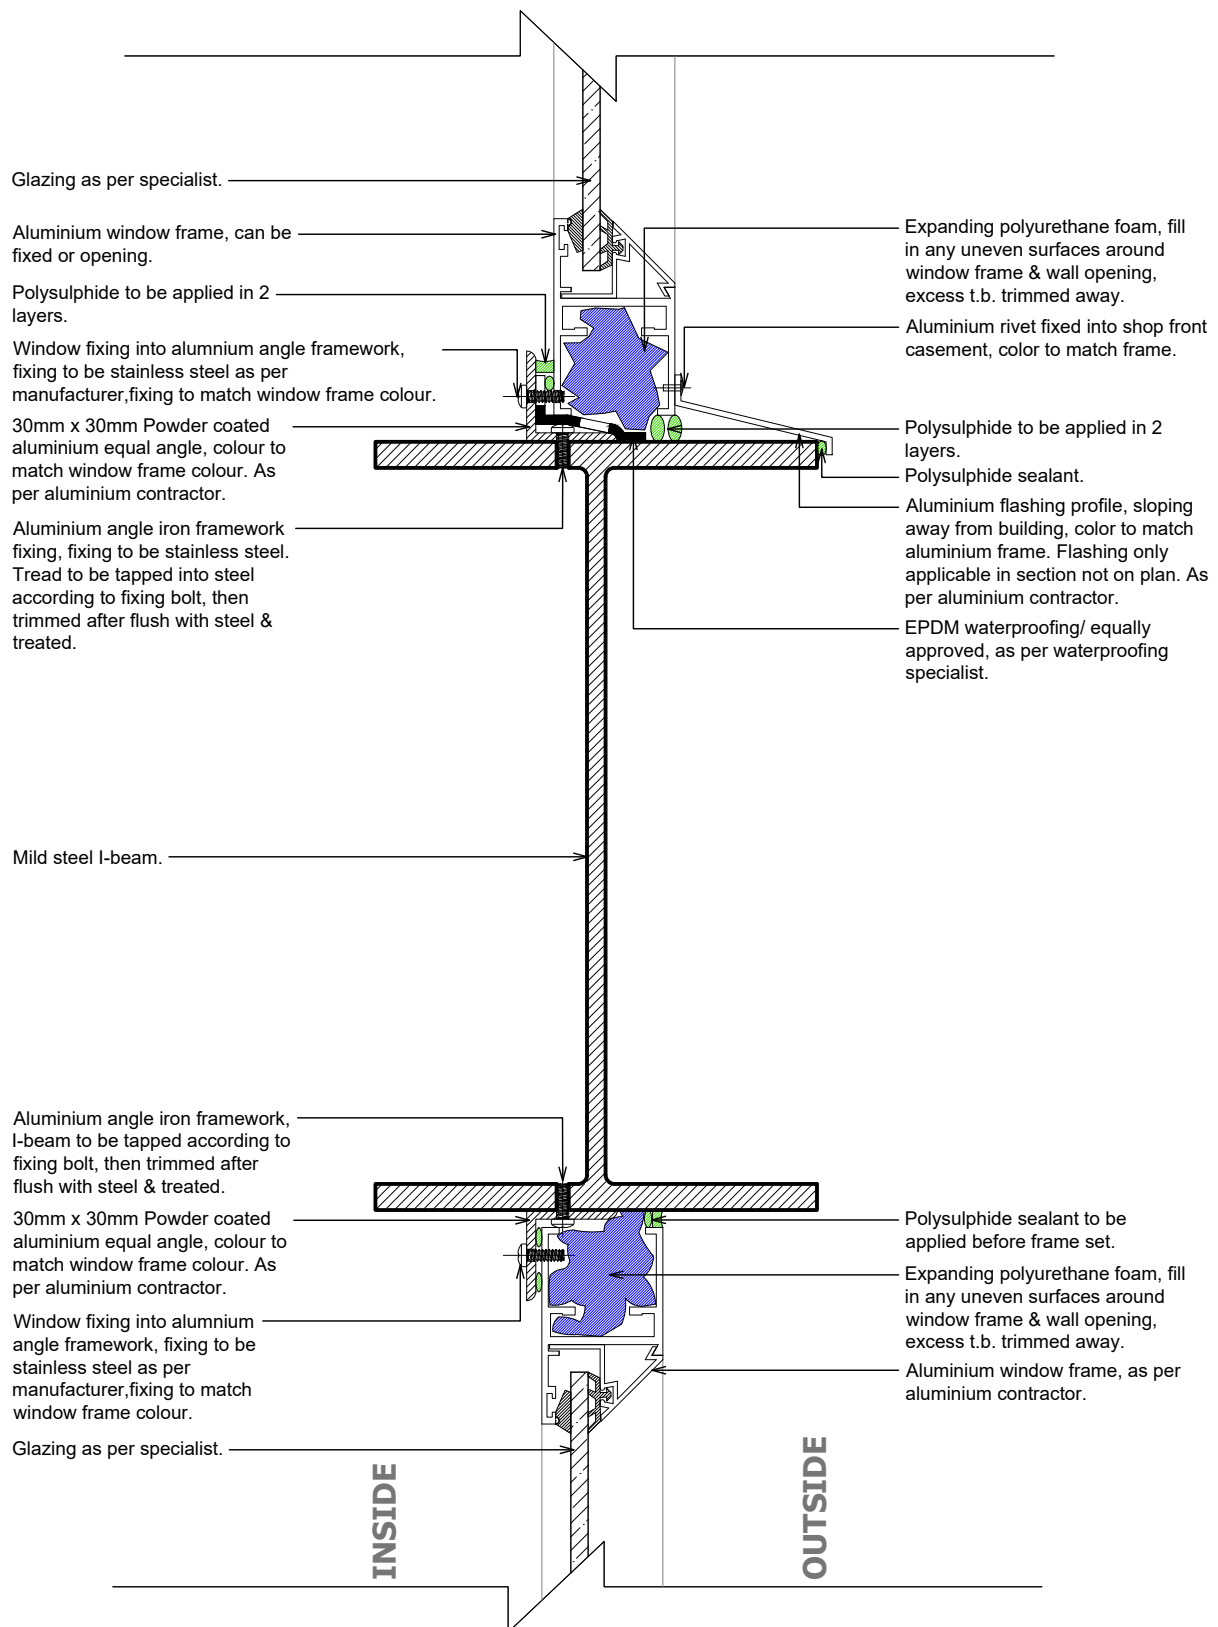



GENERAL NOTE :

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

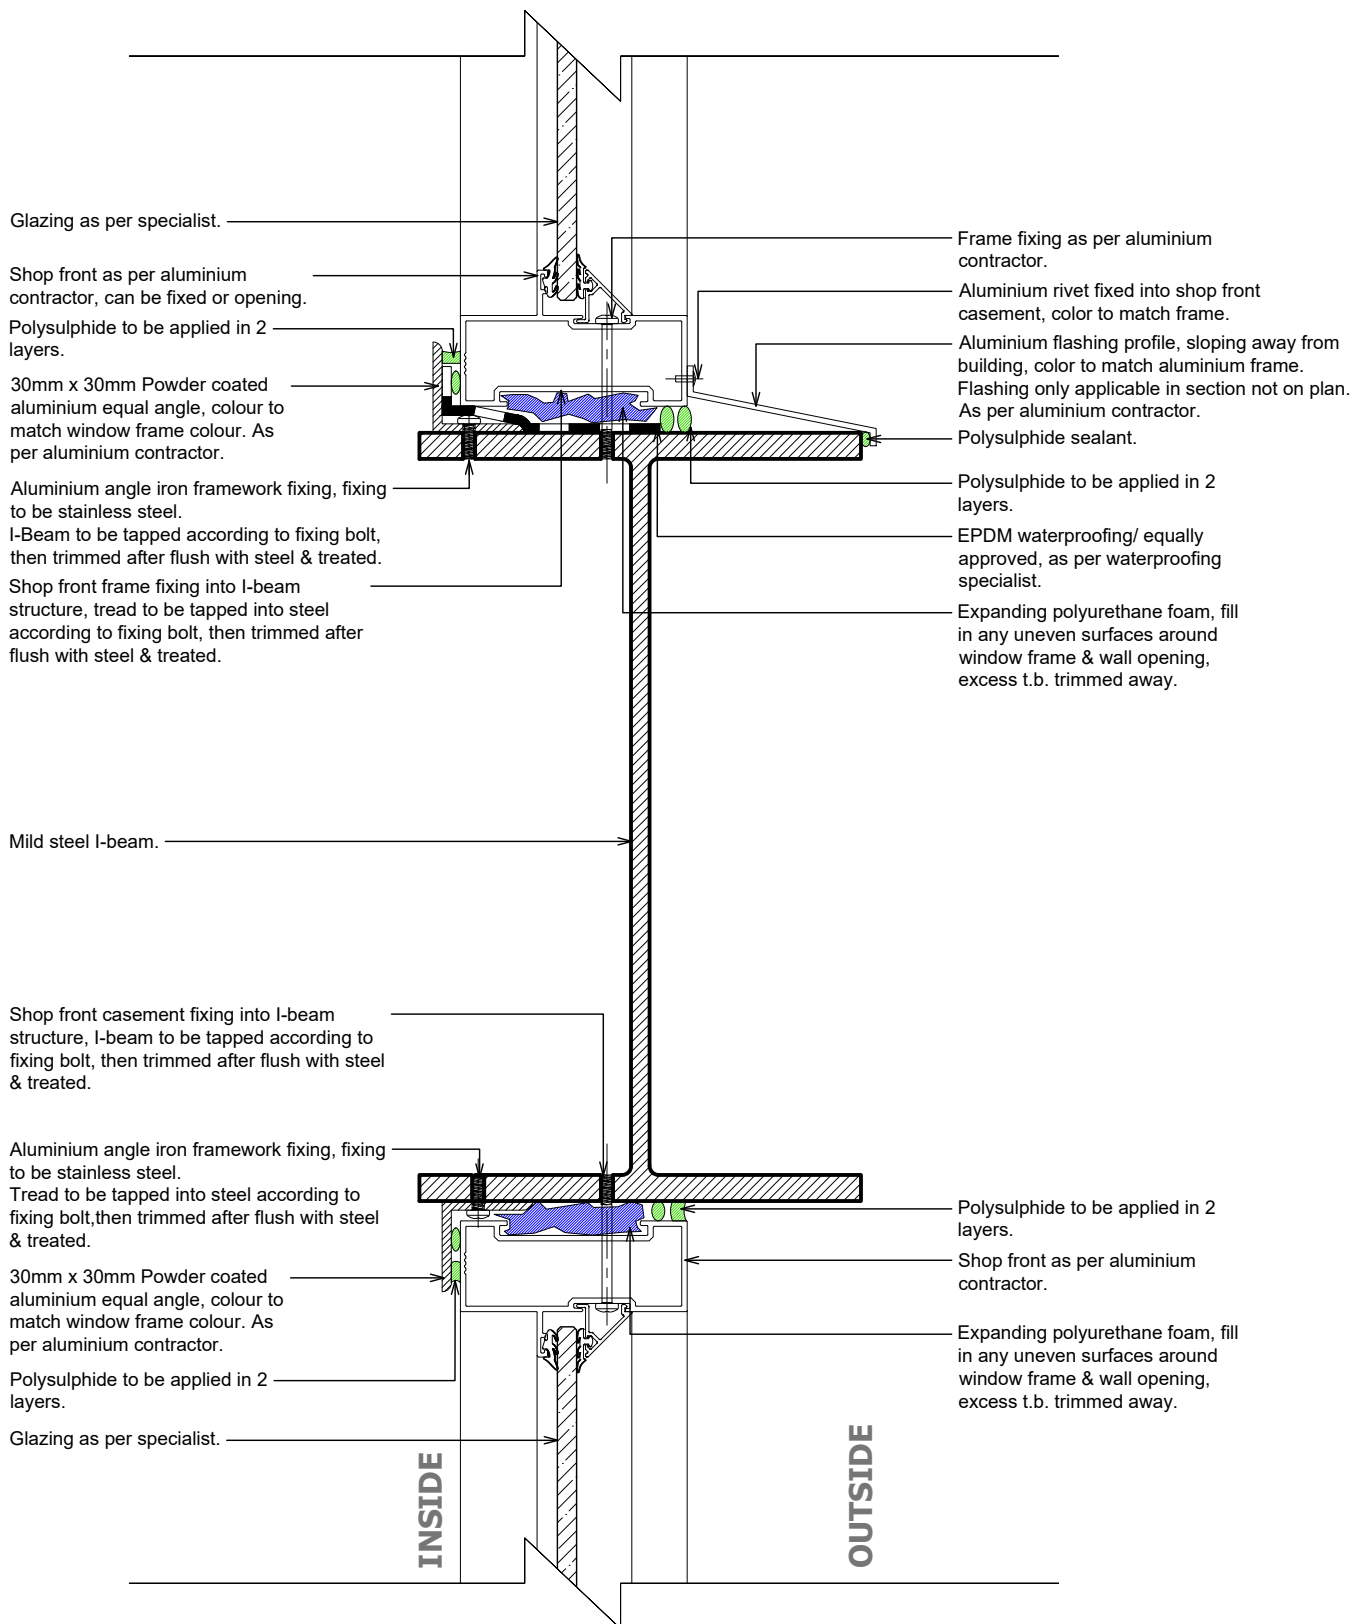

GENERAL NOTE :


Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

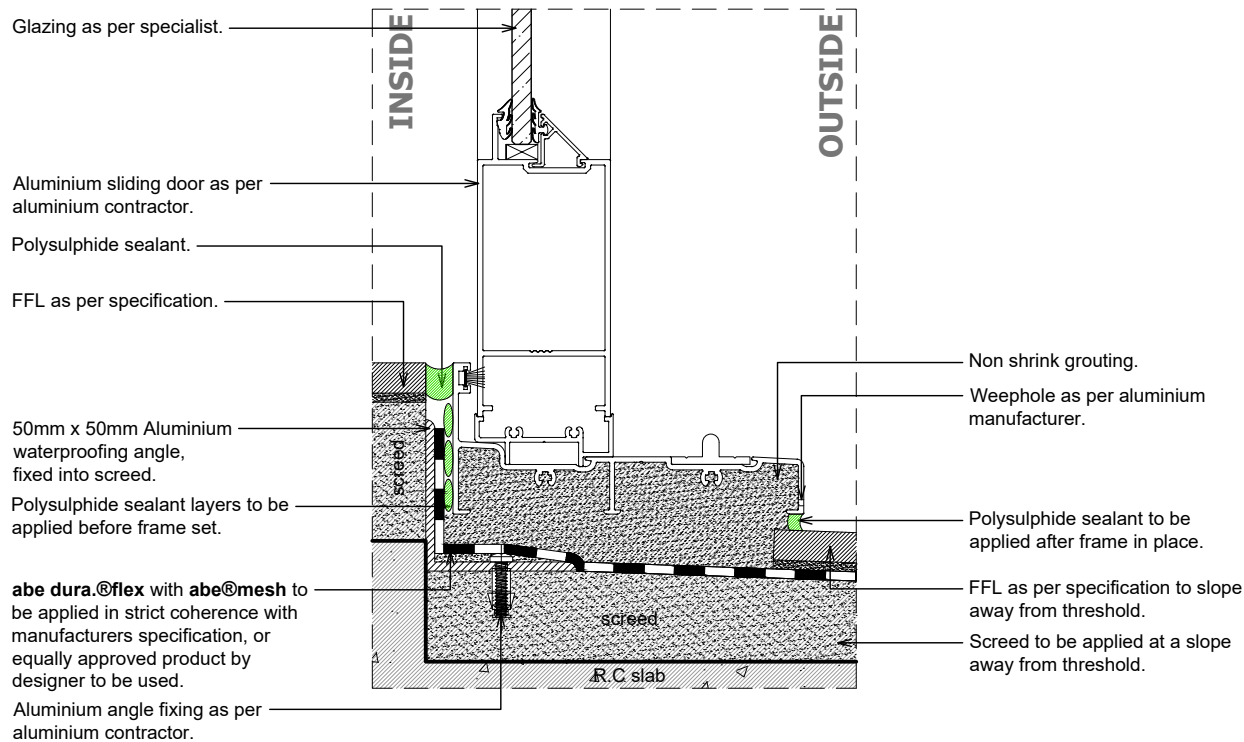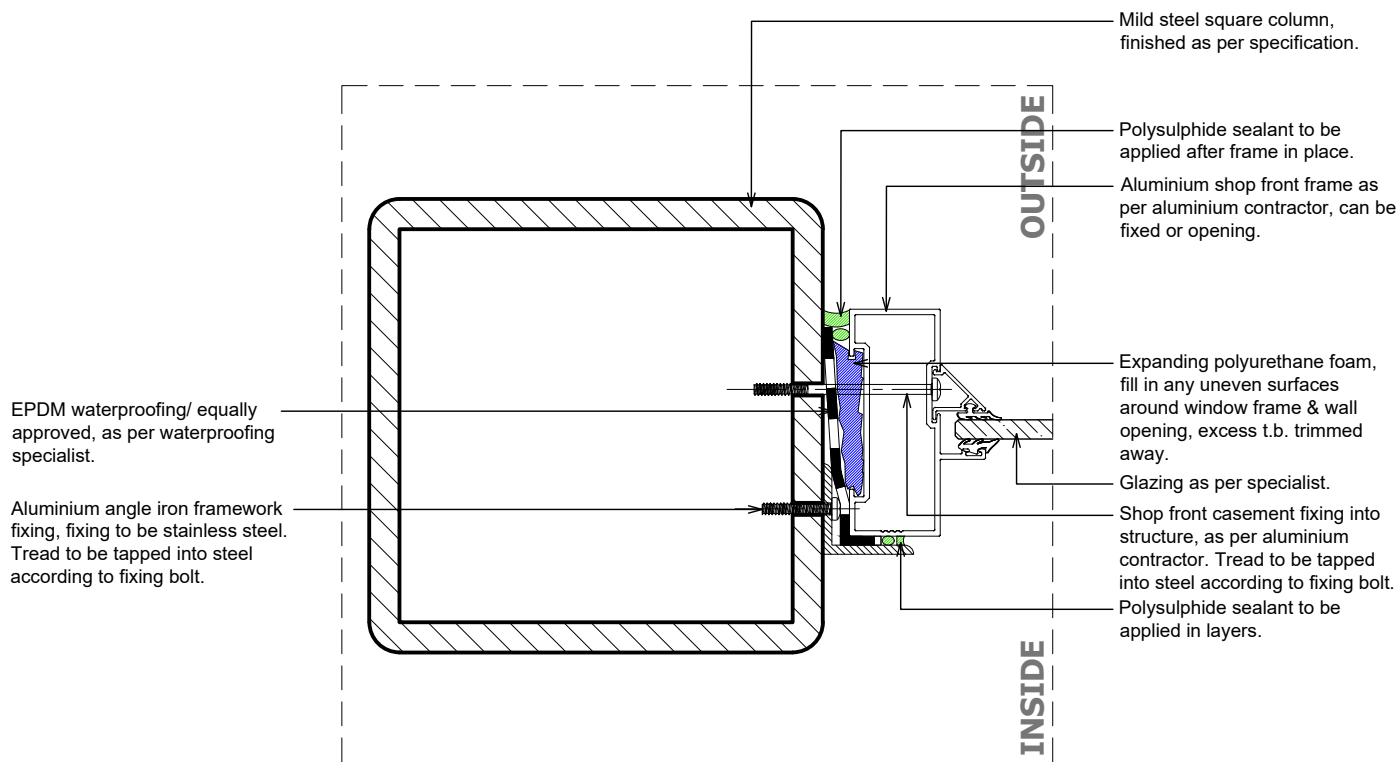


GENERAL NOTE :

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

09


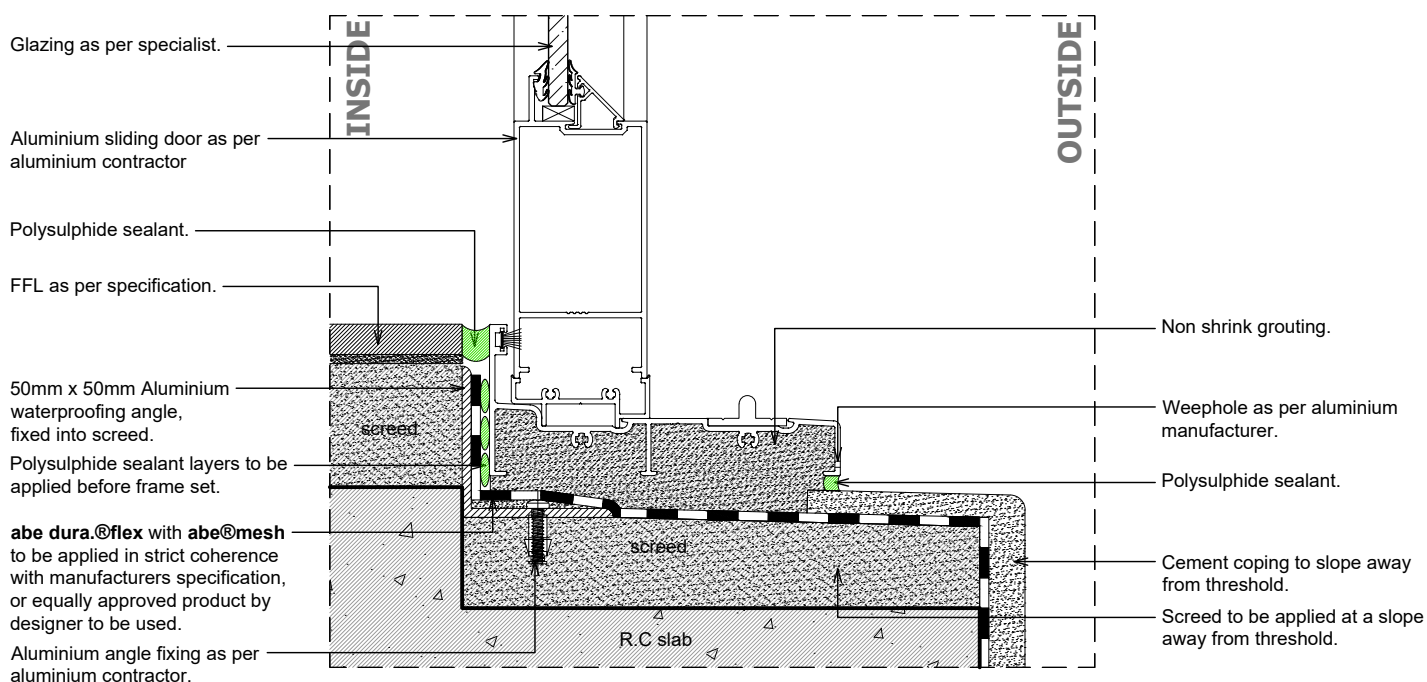


10

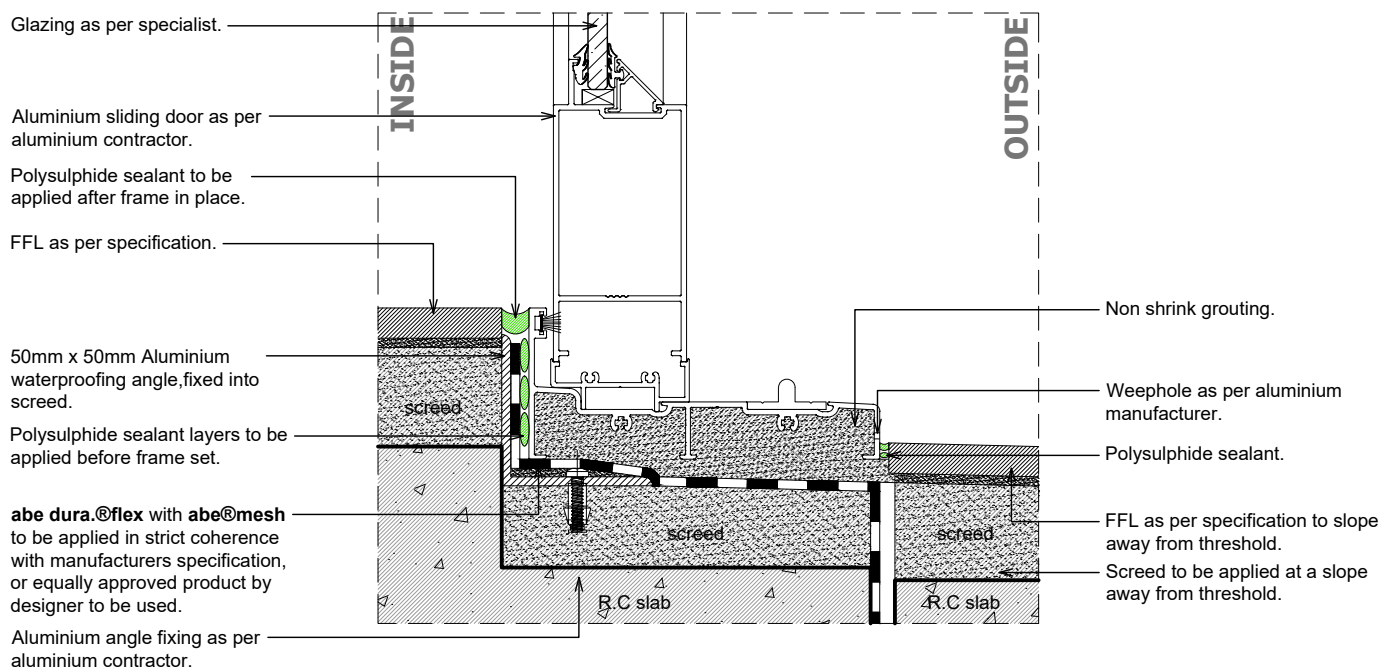



GENERAL NOTE :

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

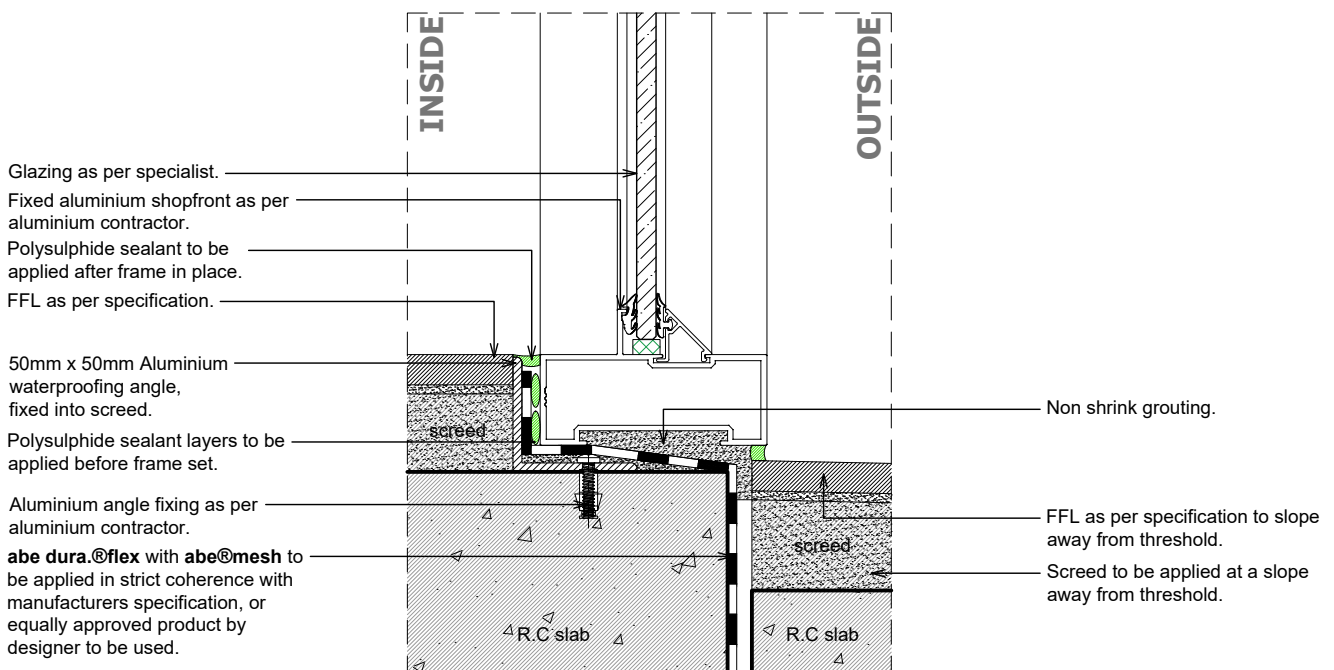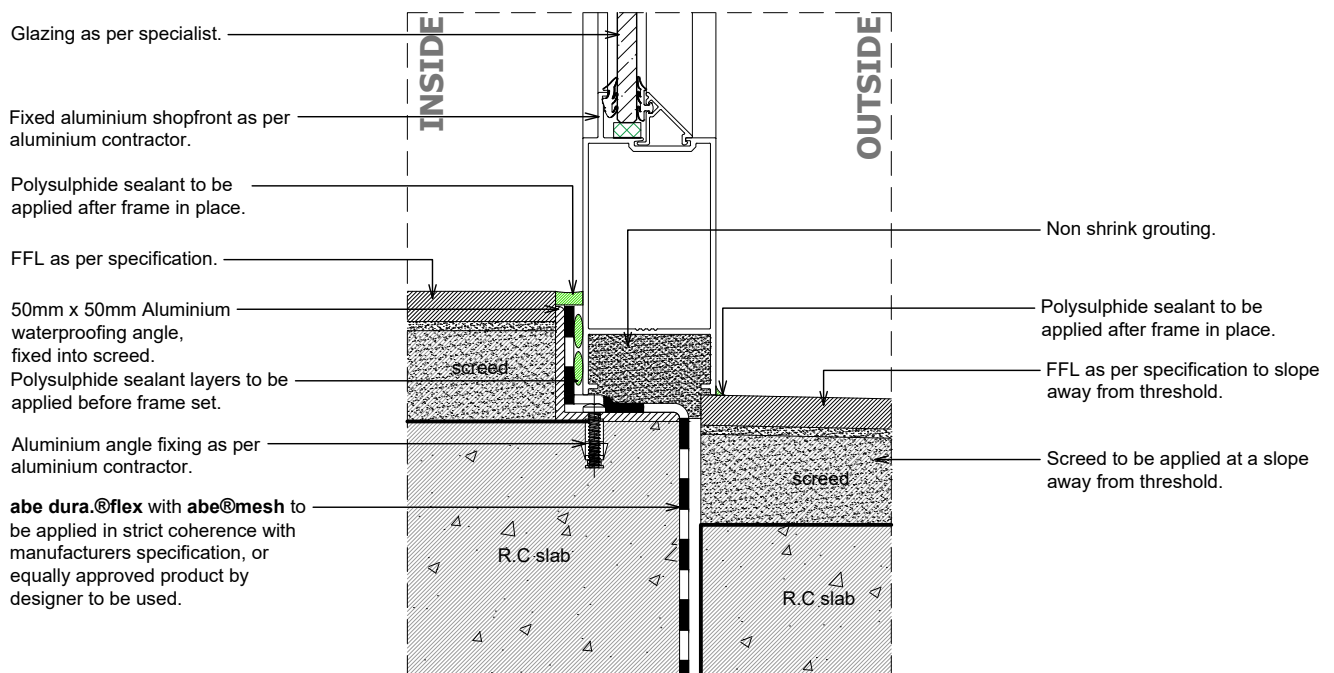

GENERAL NOTE :


Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

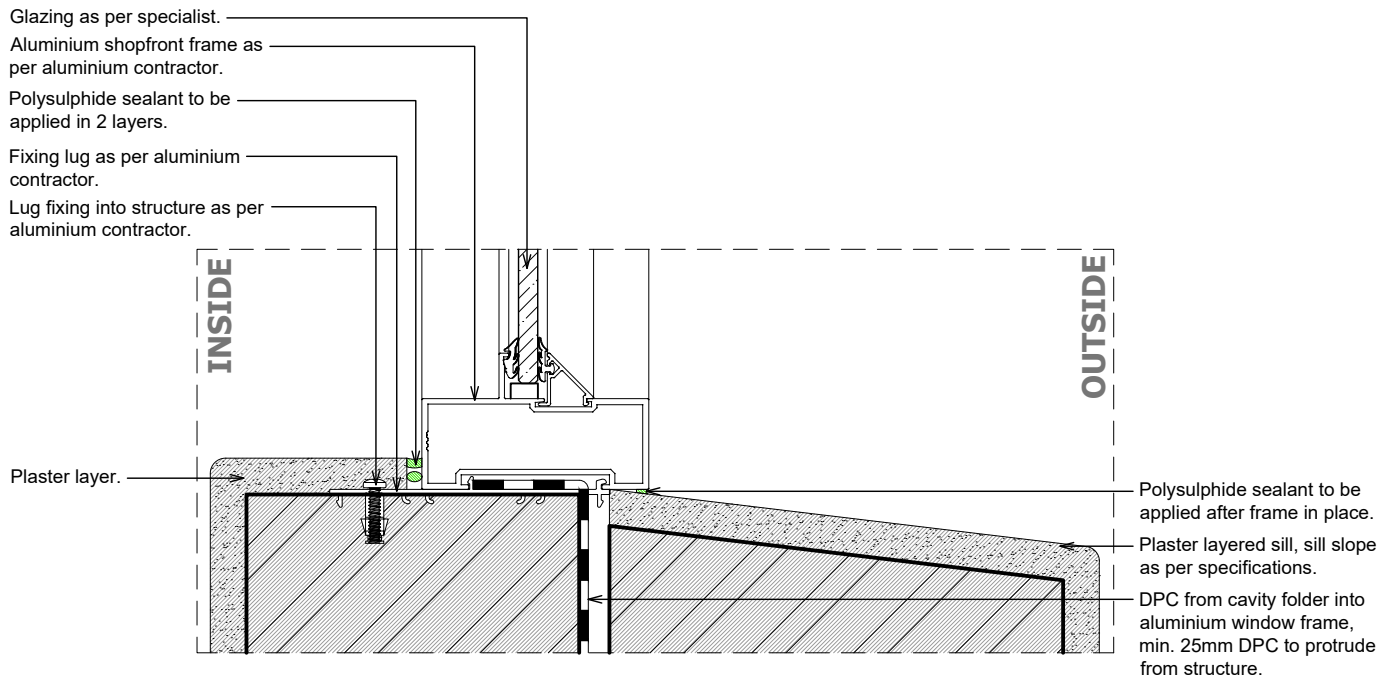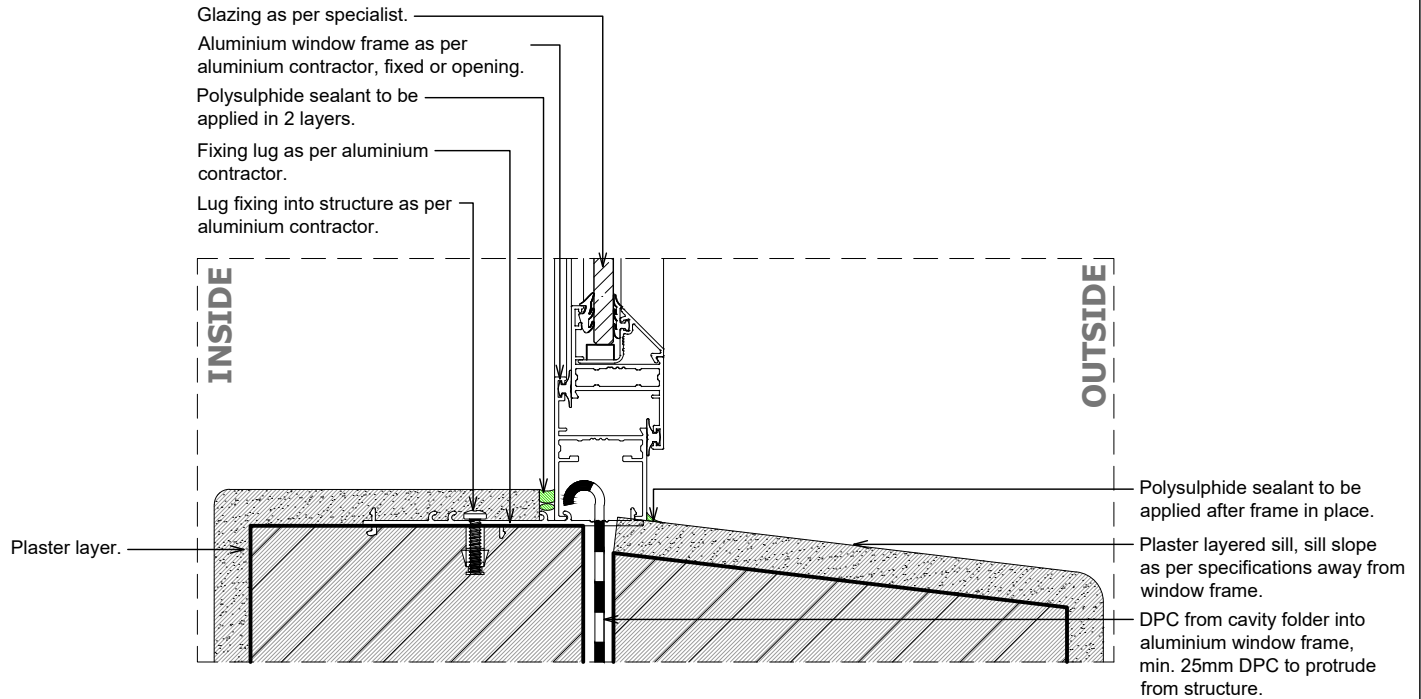


GENERAL NOTE :

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

15

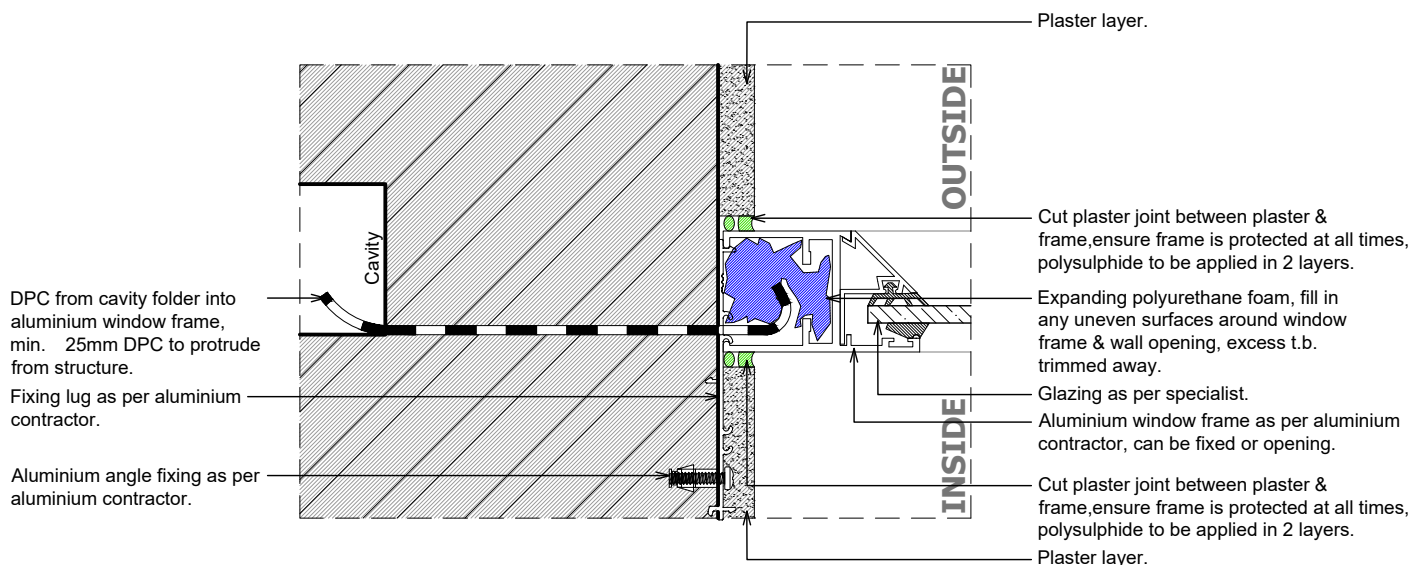



16

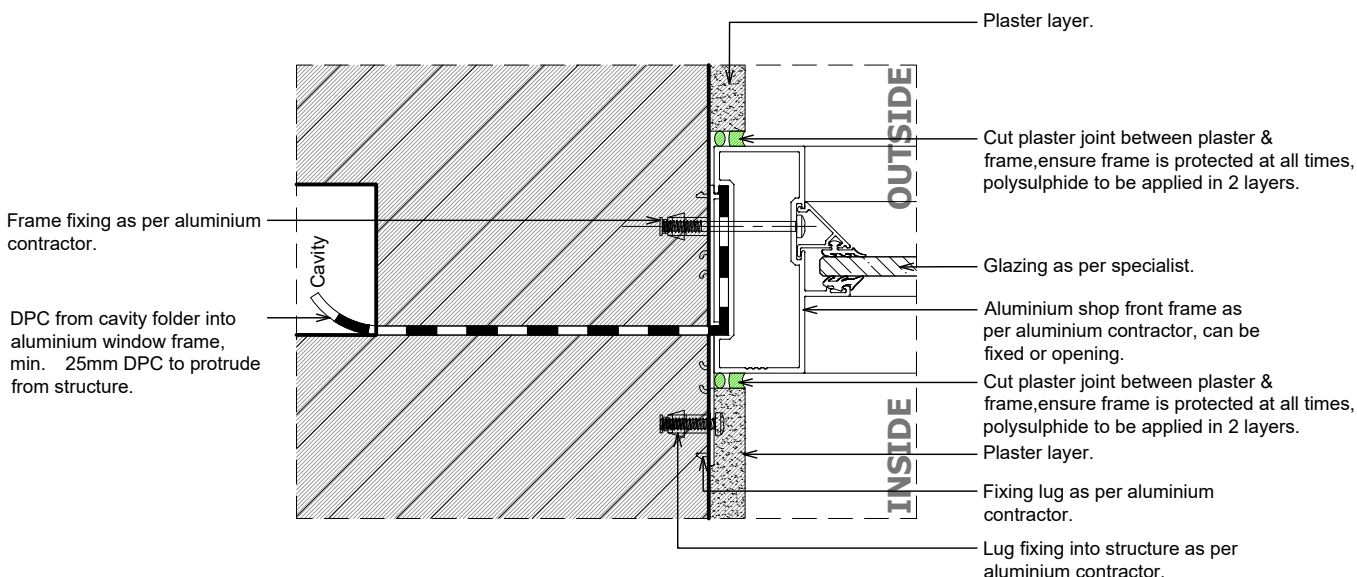**GENERAL NOTE :**

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.

Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.

Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.

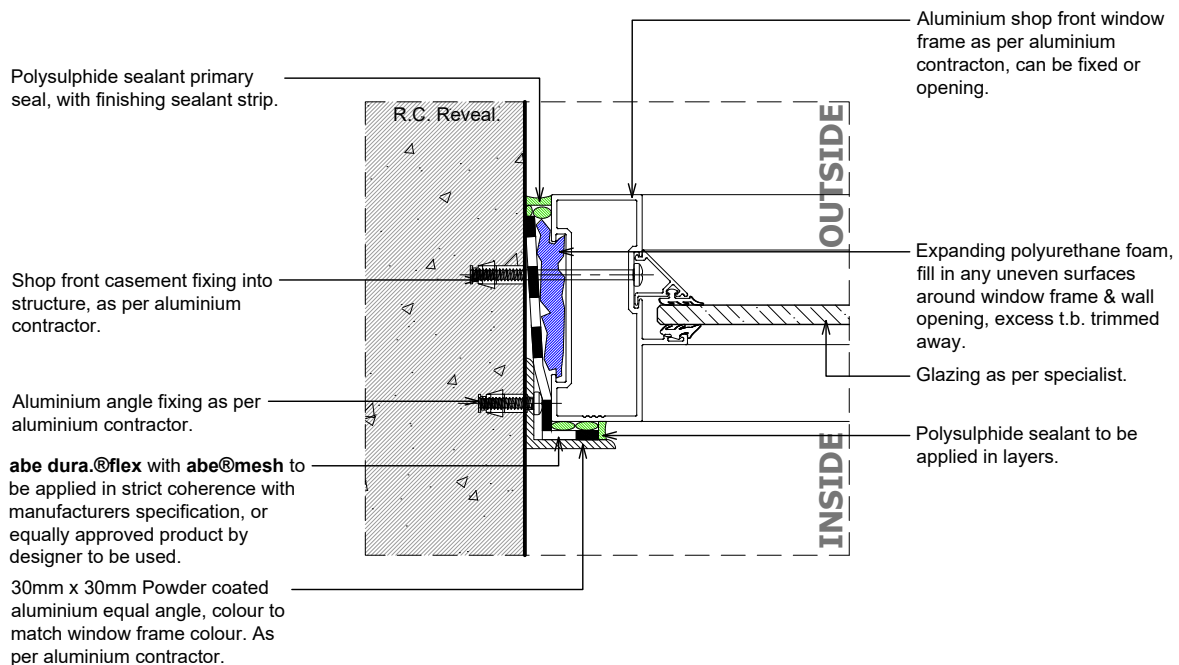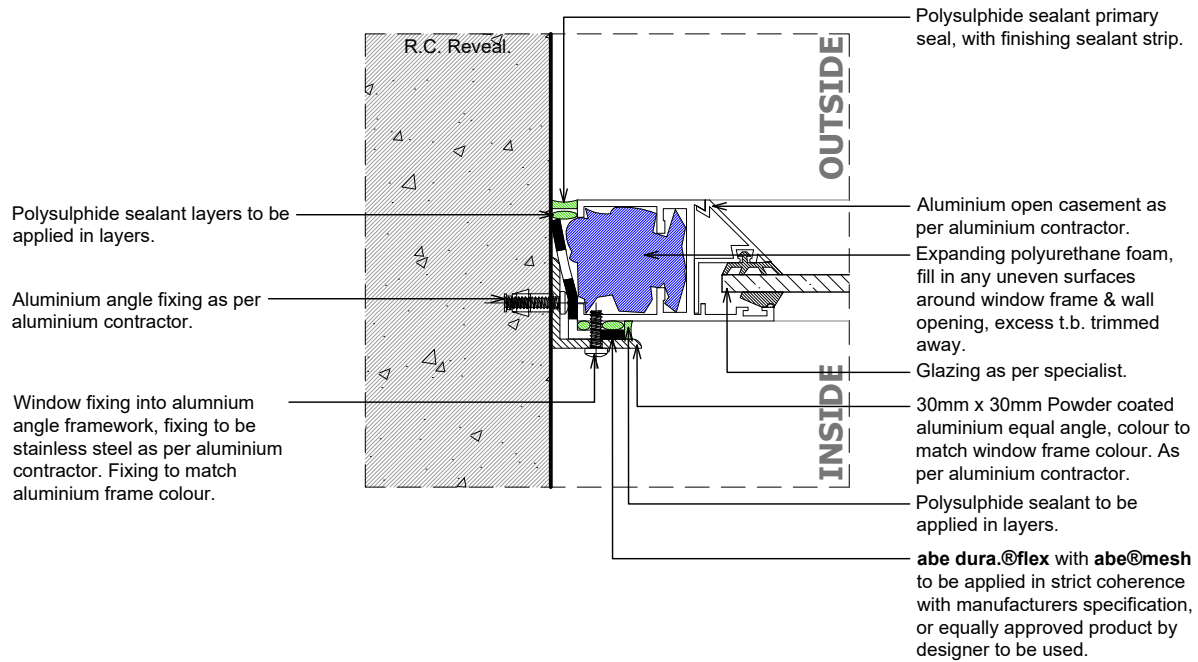

GENERAL NOTE :

Ensure areas are clean, free of dust, where polysulphide sealant/ polyurethane foam applications are required.
Keep solvents like turpentine away of areas to be sealed as it will leave an oily residue. Rather use alcohol based solvents for prepping surface.
Where puncturing through EPDM/ equivalent membrane when fixing frames, fixing punctures to be sealed.